

Visual Ring Indicator for M200x & M2x16 Meridian 1/CS 1000 Telephones

There are three options for Visual Ring indication for the above telephones:

1. Use Spare Analog Station Port

It is always an option to program a spare analog port on the system to ring when the specific digital telephone rings and activate an Algo Visual Alerter from the analog port. See www.algosolutions.com/pdf/AN-0502.pdf for more information.

2. Use Nortel Networks A0359184 (NT2K4OWA) External Alerter Board

Using the External Alerter Board (EAB) will allow you to plug the 1127P Visual Alerter or 1126P Strobe Light directly into the telephone. See www.algosolutions.com/pdf/AN-0513.pdf for more information on the EAB.

Requirements

- Nortel Networks A0359184 EAB
- 1127P Desktop Visual Alerter or 1126P Strobe Light

3. AuxBox

The 4100 AuxBox can monitor the digital wire pair by connecting anywhere between the PBX and telephone to detect ring messages to the telephone. The 1127P or 1126P can be activated by the AuxBox. Please refer to Diagram 2.

Requirements:

- 4100 AuxBox
- 1127P Desktop Visual Alerter or 1126P Strobe Light

Learn More

- Overview of Visual Ring Indication (See www.algosolutions.com/pdf/AN-0514.pdf)

For Meridian 1/CS 1000 Telephones:
M2006/2008/2216/2616

Diagram 1: Using External Alerter Board

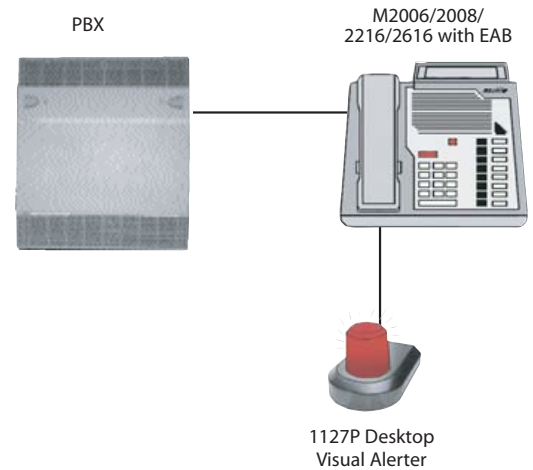


Diagram 2: Using AuxBox

