

In-Use Visual Indicator for Meridian 1/ CS 1000 M200x & M2x16 Telephones

There are two different options for connecting an Algo Visual Alerter for In-Use Notification:

1. Use Nortel Networks A0359184 (NT2K40WA) External Alerter Board:

Once the External Alerter Board is installed, a dry contact closure will be provided on the second pair of the modular station jack whenever the handset or speaker is active. The 1127P Desktop Visual Alerter or the 1126P Strobe Light can be activated directly from the dry-contacts provided. See www.algosolutions.com/pdf/AN-0513.pdf for more information on the EAB.

Requirements:

- Nortel Networks A0359184 (NT2K40WA) EAB
- 1127P Desktop Visual Alerter or 1126P Strobe Light

2. AuxBox

The 4100 AuxBox will detect "off-hook" by monitoring the messages on the digital wire pair and can be connected anywhere between the PBX and telephone.

In-use indication will be provided whenever the telephone is "off-hook", regardless of whether it is with handset, headset, or hands-free.

Requirements
<ul style="list-style-type: none"> • 4100 AuxBox • 1127P Desktop Visual Alerter or 1126P Strobe Light

Learn More

- Overview of Visual In-Use Indication (See www.algosolutions.com/pdf/AN-0610.pdf)

For Meridian 1 Telephones: M2006/2008/2216/2616

Diagram 1: Using External Alerter Board

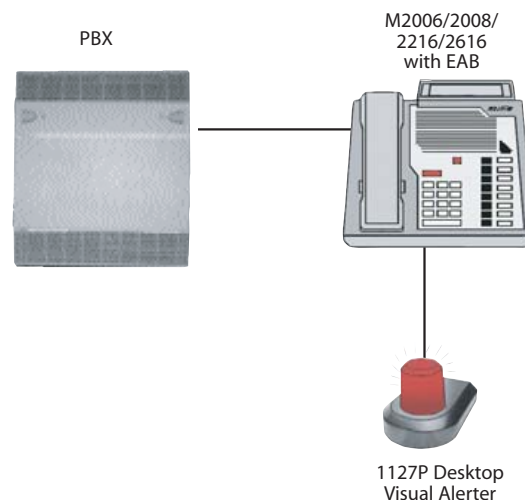


Diagram 2: Using AuxBox

