

T7406 Visual Ring, In-Use, and Message Waiting Indicator

This Application Note describes how the T7406 telephone can be set up for Visual Ringing, In-Use, or Message Waiting indication.

An Algo 4100 AuxBox connected to the digital wire pair between the KSU/BCM and T7406 base station will monitor the digital signaling and can be programmed to activate one of its relay outputs when the telephone is ringing, in-use (off-hook), or if there is a message waiting.

The AuxBox unit can be configured via dipswitches on the front panel for each functionality (ring, in-use, or message waiting).

The relay output can be used to activate a 1127P Desktop Visual Indicator or the 1126P Strobe Light.

Requirements:

- 4100 AuxBox
- 1127P Desktop Visual Alerter or 1126P Strobe Light

Learn More

- Overview of Visual In-Use Indication (See www.algosolutions.com/pdf/AN-0610.pdf)
- Overview of Visual Ring Indication (See www.algosolutions.com/pdf/AN-0514.pdf)
- Overview of Visual Message Waiting Indication (See www.algosolutions.com/pdf/AN-0404.pdf)

For T7406 Norstar/BCM Telephone

