

Key Product:	Algo 8028 SIP Doorphone
Application:	Algo 8028 SIP Doorphone Configuration for CudaTel Communication Server
Summary:	The Algo 8028 SIP Doorphone can be configured to register to the CudaTel as a generic SIP device. This can be accomplished in a few steps as listed below.

From the CudaTel

1. Navigate to Extensions > People, and select the desired user. Barracuda recommends using the user Doorphone 1 (2, 3, 4...) and disabling voicemail.
2. Scroll down to the section of the properties page labeled "Phones" and click "Add a Phone".
3. Select "Generic SIP Device" and click the button labeled "Add Phone".
4. Click on the new Phone on the properties and select "Phone Information".
5. Click on the extension number on the left side of the window.

From the SIP Device/Client (Algo 8028 SIP Doorphone)

1. Enter the IP address of the Algo 8028 into your Web Browser. The default password is algo
2. Enter the IP address of the CudaTel SIP server in the box labeled "SIP Domain Proxy". Please be sure to include the port ":5065" at the end of the CudaTel server IP address (ex. 123.123.123.123:5065).
3. Enter the extension number in the box labeled "Extension"
4. Enter the Authorization ID in the box labeled "Auth ID"
5. Enter the password in the box labeled "Password"
6. Enter the Extension which should be dialed when someone presses the door button in the box labeled "Dialing Extension"

The phone should reboot and register to the CudaTel SIP Server.

For More Information:

Sales 1.604.454.3790 sales@algosolutions.com
Support 1.604.454.3792 support@algosolutions.com
Algo Communication Products Ltd., 4500 Beedie Street, Burnaby, BC, Canada V5J 5L2